Bauknecht

GSF 3042
GSF 3040

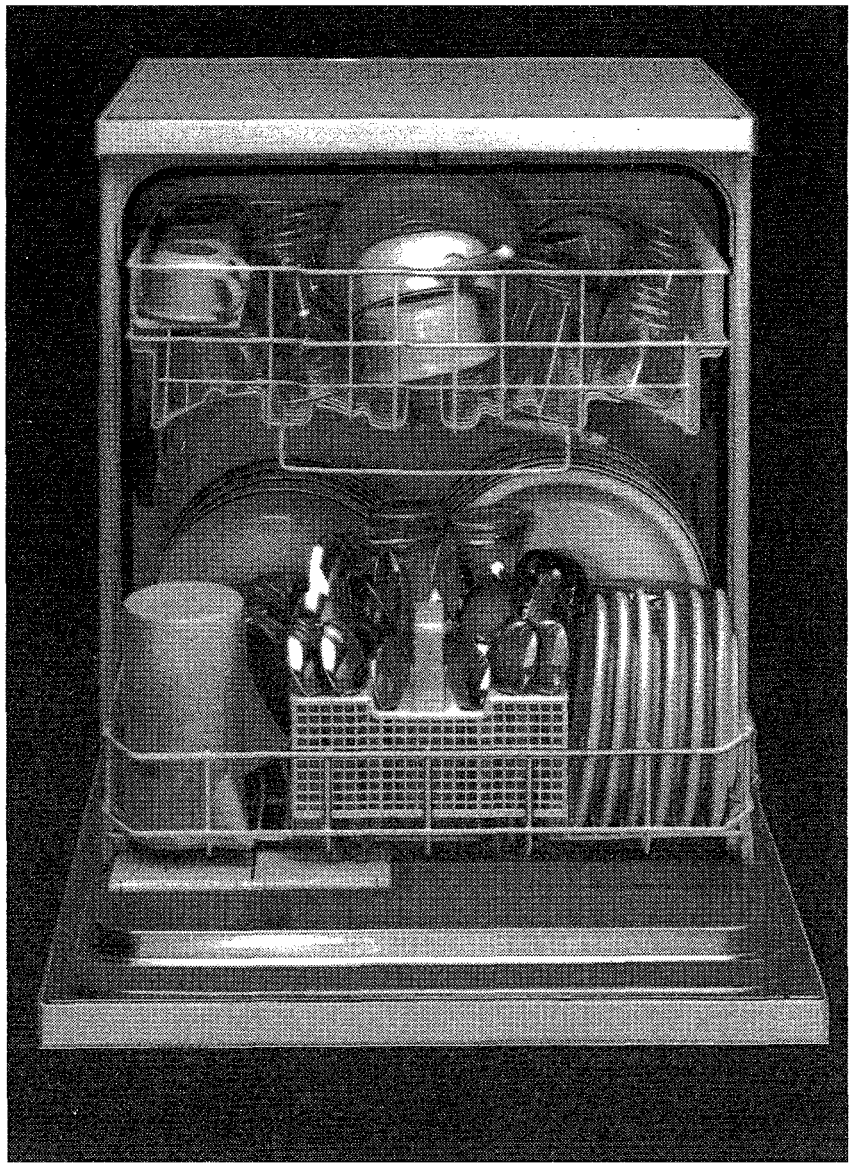

- **Gebrauchsanweisung**
  Geschirrspülautomat
- **User Instructions**
  Automatic Dishwasher
- **Mode d'emploi**
  Lave-vaisselle
- **Gebruiksaanwijzing**
  Afwasautomaten
- **Istruzioni per l'uso**
  Lavastoviglie
- **Instruções para o uso**
  Máquinas de lavar loiça
- **Instrucciones para el uso**
  Lavavajillas

D
GB
F
NL
I
P
E

(D) Seite 1

(GB) Page 15

(F) Page 29

(NL) Bladzijde 42

(I) Pagina 55

(P) Pagina 69

(E) Página 82

Congratulations!

You have chosen a dishwasher which is manufactured to the highest technical specifications and yet is easy to use.

This appliance is manufactured using all that is technically possible today to give the best possible wash result.

The appliance is especially economical with water and electricity and requires little detergent, rinse-aid and salt. It gives you the opportunity to help conserve the environment.

We recommend that you read these instructions carefully so that you quickly get to know your machine.

Keep them in a handy place so they may be reffered to quickly.

A good appliance, when treated with care, will last for many years.

Protect the environment!

Packaging:

Take recyclable packaging materials to the nearest collection point.

Warning

Before using your appliance please read the instructions carefully. They contain important advice about the use, installation and care of your appliance.

Please keep these booklets in a safe place for future users.

The manufacturers cannot be held responsible for any injury or damage to persons, animals or property if the following advice has not been observed.

1. When using this appliance or indeed any electrical appliance you must respect basic safety rules.
   In particular:
   - do not touch or operate the appliance with wet hands or when barefoot
   - do not pull the cable to unplug, but the plug itself
   - do not expose the appliance to the weather (rain, sun, etc.)
   - do not allow the appliance to be operated by young children or by the disabled without surveillance.
2. After unpacking the product make sure it is complete and undamaged. In case of doubt, do not use the product and call for a qualified technician or our customer service.
   Packaging (plastic bags, polystyrene parts, nails, etc.) must be stored out of reach of children as they are potentially hazardous.
3. Only use the appliance for domestic use and for its intended purpose. Any other use such as for washing or rinsing small household appliances or electrical kitchen tools is very dangerous.
4. Installation must be carried out by a qualified technician following the manufacturer's instructions (see important note: "connecting up the unit").
   Before connecting up the appliance make sure that the data shown on the rating plate correspond to those of your house.
   Electrical safety is assured only if the appliance is correctly earthed as prescribed by safety standards for electrical installations.
   It is imperative that this fundamental safety requirement be checked. In case of doubt, careful inspection of the house wiring must be carried out by a qualified electrician.
   If the type of socket in your home does not correspond to the plug on the appliance, it is suggested to ask for the replacement of the socket outlet by a suitable type.
   In general the use of adapters, multiple sockets and / or extension cables is not recommended.
5. Before any cleaning or maintenance operation disconnect the appliance from the mains by switching off the electricity at the mains or by pulling the plug.
6. Do not leave the appliance switched on unnecessarily. Switch off at the main switch.
7. Disconnect the appliance from the mains and close the water tap in case of any malfunction or if a fault is detected.
   For any repairs call in a specialist or our customer service through one of our Service Centers and ask for original spare parts.

8. Disconnect any disused appliances and render them unusable. Remove the door lock or render it inoperable to prevent children being locked inside by cutting off its power cable.
   Ensure the appliance is disposed of properly and safely.
9. Store detergents and rinse-aids in a cool, dry place, out of the reach of children.
10. Do not drink the water left in the appliance or in glasses or dishes at the end of the program cycle.
11. Do not let children play with or in the dishwasher.
12. Do not use any solvents e.g. turpentine, alcohol or white spirit in the dishwasher, as there is a danger of explosion.
13. The water inlet hose with the plastic sheath at the tap connection contains electrical components. It must not be cut or immersed in water. If the hose is damaged, the appliance must be disconnected from the mains, see item 7.
14. In order to ensure rigidity, built-under and integrated models may only be installed under a continuous worktop which is screwed to adjacent units.
15. Do not place any heavy objects on an open dishwasher door. Ensure that no-one sits or stands on an open door.
16. Only use detergents, rinse-aid and regenerating salt which are specifically recommended for use in domestic dishwashers.
17. Only wash crockery and utensils which are designed to be washed in a dishwasher.
18. Cutlery will be washed and dried more effectively if it is placed in the cutlery basket with handles downwards. However, if there is a risk of someone being injured by the knife blades or fork prongs, cutlery may be placed in the basket with the handles upwards.

Contents

	Page
Connecting up the unit	19
Appliance Description	20
Water Softening	20
Dishwashing Powder and Rinse Aid	21
Adjustable Crockery Baskets	22
Spray Pressure Setting	22
Loading of Crockery	22
What one should know about washing dishes by machine	23
Economy Tips	23
Selecting Programme and Switching On	23
Washing Programmes	24/25
Programme Sequence Indicator	26
Drying	26
Switching Off	26
Maintenance and Care	27
Note on testing	27
Note on transportation	27
Hints for dealing with minor operating problems	28
Breakdown – what to do	28

These user Instructions apply to more than one model, and there are detailed variations between the models.

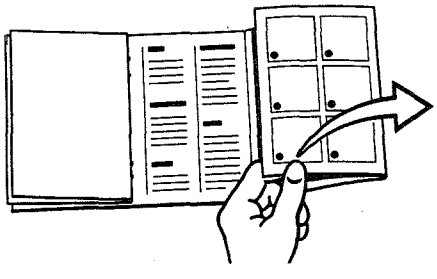

The illustrations are located inside the back cover.
Fold out the cover so that you have the text and illustrations side by side.

Connecting up the unit

Electrical connections

Make sure you observe local electricity board regulations!
The unit conforms to the relevant European safety regulations and to European Community Directive No. 87/308/EEC on interference suppression.

The electrical connections and fuse protection data can be found on the name plate inside the door on the right.

A damaged power cable may only be replaced by an electrician. Special tools are needed!

Water inlet and outlet hoses

Make sure you observe local water board regulations!
Water inlet and outlet hoses must be fitted in such a way that they are not kinked.

This dishwasher cannot suck water back. So there is no need to use connecting fittings with a non-return valve.

Hose length

If the hose supplied is not long enough, it must be replaced by a longer one of the same type (available from dealers or from our customer services department).

The water outlet hose must be fixed in place at the siphon with a hose clip to make sure it does not slip out of position.

Standard water inlet hose

Cold water inlet hose with blue marking for temperatures up to 25 °C (if fitted).
Cold or hot water inlet hose with red marking for temperatures up to 60 °C (if fitted).
Before connecting up the hose, place the dirt filter seal (supplied) in the screw connector at the end of the inlet hose. When dishwashing is finished it must be possible to shut off the water supply at the tap or a shut-off valve to prevent damage due to water.

The 7-fold water security system

– if fitted –

Cold or hot water inlet hose (to 60 °C). Recognizable by the plastic sheath on the hose.

The 7-fold water security system protects your home against water damage. In the event of a leak in the inlet hose or within the machine itself, the system shuts off the water supply completely.

Appliance Description

Control panel

Fig. ①

1. Programme button with operating light
2. On-Off button
3. Operating indicator light
4. Programme sequence indicator
5. Opening and Closing the Door
   To open, put hand behind the hand grip and pull door outwards.
   To close, apply pressure at the top, middle of the door until there is an audible click to indicate that the catch has operated.
6. Programme selector knob (with programme sequence indicator)

Interior

Fig. ②

1. Ceiling jet (not visible in picture)
2. Water feed pipe with spray pressure adjuster
3. Upper crockery basket
4. Upper spray arm
5. Lower spray arm
6. Dirt sieve (not visible in picture) with micro-filter
7. Washing powder dispenser
8. Rinse aid dispenser with internal dosage adjuster
9. Salt dosage setting for water softener
10. Container for regeneration salt
11. Service number
12. Rating Label
13. Programme descriptions

Illustrated without lower crockery basket and cutlery holder.

Water softening

Fig. ②/10

When the supply water has a hardness level of 7° dH / 8,4° Clarke (Hardness Range 1) or over, the water must be softened, to avoid the formation of calcium deposits on the crockery and in the appliance. To ensure functioning of the water softening system, the salt container must always be filled with regeneration salt. We recommend the use of ICI Granular Salt.
The salt container on a new appliance must be filled before the first operation of the appliance.
Only special regenerating salt specifically developed for use in dishwashers, should be used. Do not, under any circumstances, use table salt, cattle salt or thawing salt, since these types of salt contain insoluble elements (to help them flow better). These can affect the water softening unit.
Do not put any other ingredient into the salt container (eg powder, softener).
One mistake alone can cause damage.

Salt Level indicator

– mechanical

Fig. ③
When the salt container is full, the green salt indicator floats at the top and the further the salt goes down, the lower the float sinks. When it is no longer clearly visible, salt must be replenished.

Replenishing Salt

Fig. ③
Open the door of the dishwaser, remove the bottom basket, then unscrew the cap of the salt container ⊆ . On a new appliance, pour 1 litre of water into the salt container first.
Place the funnel supplied onto the opening, then fill with salt to just under the edge, stirring with the handle of a spoon to settle the salt. Remove the funnel and rinse around the container opening, to remove surplus salt. Refit the salt cap and turn it lightly clockwise to secure it.
The capacity of the salt container is aprox. 2 kg.

When salt is added, a saline solution flows out of the salt container. This must not be left in the machine for a long period as it will lead to rust forming. The time to top up the salt container is just before running the machine on any programme apart from Programme 1 (prewash) so that the inside of the machine is rinsed out by the hot water during dishwashing.

Water softening selector switch

setting fig. ④	° clarke	mmol/l
2 soft	under 10°	under 1.44
2 medium	1–25°	1.45–3.8°
3 hard	26–34°	3.9–5.0
4 very hard	over 34°	over 5.0

Water hardness: 1 mmol/l ≙ 100 p.p.m ≙ 7 °Clark (english degrees) ≙ 10° French degrees ≙ 5,6° German degrees.

The setting knob for the salt dosage is on the right hand side, inside the dishwasher (Fig. ④). This knob can be set with a coin to the appropriate setting for Hardness Range 2–4. The setting ensures the correct supply of salt for proper regeneration of the softener.

In an area with soft water (under 10 °Clarke) your dishwasher can be run without salt (set the water softening selector switch to 2). The electrical salt level indicator – if fitted – will light up during dishwashing. This can safely by disregarded. If phosphate-free detergent is used salt has to be added.

Information on the degree of hardness of your water supply can be obtained from your local water authority, or from the local council.

Dishwashing Powder and Rinse Aid

Use only dishwasher powder and rinse aid which are made specifically for use in domestic dishwashers. We recommend that both products come from the same manufacturer – e. g. "Sun" brand from Lever Brothers.

Dishwashing powder

Fig. ② / 7

Since the various detergents vary greatly in terms of efficiency, please consult the detergent manufacturer's dosing instructions. Powder should be put in before starting every programme (except prewash).
The lid is opened by pushing the yellow button to the left. Do not add the detergent until you are ready to start the machine.

Fig. ⑤

The dispenser has two compartments, the smaller lefthand one for the prewash and the larger one for the main wash.
On programmes **without** prewash use only the larger compartment.
When running a programme **with** an initial prewash, fill one third of the recommended amount of detergent into the smaller compartment on the left and the remaining two thirds into the larger compartment on the right.
The main detergent compartment has two markings:
min.: approx. 25 ml
max.: approx. 40 ml
After adding detergent, close the detergent compartment lid by pressing lightly.
The small compartment empties automatically as the machine door is closed.
The dispenser is always open after a programme has finished.
Note:
Amount of detergent required depends largely on how full the machine is and how soiled the dishes are. For a full load and normal to heavy soiling use more detergent. For a light load and light soiling use less detergent.

Rinse Aid

Fig. ② / 8
With the help of rinse-aid, the crockery dries clean and free of spots. The proper dose is flushed in automatically from the dispenser.

Rinse-aid refill indicator

– Mechanical

Fig. ⑦

The level is shown by the indicator eye. If the eye is black, the reservoir is full. As the level drops, the black ring decreases in size until there is no black showing; the reservoir must be refilled then, at the latest.

Replenishing rinse-aid

Fig. ⑥

To fill up with rinse-aid, open the reservoir lid by pressing in the yellow tab. Add rinse-aid until the indicator glass turns completely black. **Wipe off any spilt rinse-aid with a cloth.** Close the lid again, applying light pressure until it clicks shut.

Rinse-aid Dosage Setting

Fig. ⑧

The adjustment knob is accessible when the lid of the dispenser is open. The knob should be turned by hand or with a coin to the desired setting. The factory setting is 3. If there are stripes on crockery after it has been washed, turn to a lower setting (1 or 2).
If there are rings or calcium spots on the crockery, turn to a higher setting (4, 5 or 6).

Adjustable Crockery Baskets

In this appliance there are two different types of crockery baskets. In addition, a removable cutlery basket is situated in the lower basket.

On the left hand side of the upper basket are two hinged cup racks. These can be set to two positions. (Slanting or horizontal).

In position at an angle, simply lift the racks and press towards the back. When the rack is released it will stop at an angled position. To position horizontally, lift and push towards the front.

The angled position is particularly suitable for cups with deep wells in the base and for supporting long-stemmed glasses.

Spray Pressure Setting

Fig. ⑨

The spray pressure for the upper basket can be adjusted. Markings on the water feed pipe show the setting. Normally, the pipe should be set to give maximum pressure – i. e. turned fully to the left. Turn the pipe to the right to give minimum pressure when washing delicate crockery, or when there is only a partial load.

Warning:

Keep the opening water feed pipe free.

Loading of Crockery

This dishwasher will hold 12 International Place Settings, including serving dishes. This is the typical daily amount of crockery used by a family of 3–4 people.

Remove all leftovers of food – e. g. potatoes, pasta, bones and fruit stones – from crockery before loading it into the baskets.

Fig. ⑩ / ⑪ / ⑬ / ⑭

Bottom Crockery Basket with cutlery basket

Plates, bowls and pots and cutlery should be loaded into the bottom basket. Cutlery should be placed in the cutlery holder with the handles at the bottom (see note 18 under warning).

Teaspoons go in the spoon holders directly alongside the handle, tablespoons in the outer spoon holders at the front on either side.

Lie cooking utensils with long handles e. g. ladles, wooden spoons etc. in the top basket.

What one should know about washing dishes by machine

Tips on various utensils which are unsuitable for machine washing.

Certain articles of aluminium are not suitable for washing in the dishwasher, as they tend to discolour.
Pewter becomes dull in the dishwasher.
Wood boards, cutlery with wood or horn handles, and temperature sensitive plastic-articles are not suitable for machine washing. Food should be cleaned off silver dishes and cutlery if they are not washed directly after a meal, as some foodstuffs can cause discolouration and spotting (oxidization).

Articles with a lot of ornamentation, bulky, deep bowls and cups make drying difficult, as the water remaining in the recesses cannot evaporate completely. When loading, make sure that such articles are tilted, as far as is possible.

Economy Tips

Electricity and water can be saved if:

- **the crockery is not rinsed under running water first**
- **the dishwasher is only switched on when fully loaded**
- **the correct programme is selected according to degree of soiling**
- **Prewash is avoided whenever possible.**
- **If environmentally friendly energy sources are used e. g. solar heating, connect to a warm water inlet (max. 60 °C).**

Selecting Programme

Fig. ① / 6

Select the required programme by turning the Programme Selector knob clockwise (as indicated by the arrow on the knob). The marker above the required programme number on the knob must be aligned with the marker on the control panel.

Press in the appropriate button for the selected programme.

Switching On

Fig. ① / 2

Press the on/off button ① fully in. The operating indicator light will come on and the selected programme will automatically start.

The appliance will operate only if the doors is properly closed. Opening the door immediately stops the programme and this should be done during Programmes 2–4 only if it is absolutely necessary, as it can upset the programme sequence and impair the washing performance.

Washing Programmes

Programme	Fig. ① A	Load
Prewash Programme	1	Part load for prewash when a ful programme is not needed
Normal Programme 65 °C (Normal Programme per IEC 436)	2	Normally soiled crockery with dried on food remains
Economy Programme with prewash 55 °C	2 + push- button	Normally soiled crockery with food remains not dried on
Economy Programme without prewash 55 °C	3 + push- button	Lightly soiled crockery with food remains not dried on

● Yes – No

	Programme Step					Consumption Data*)		
						Cold water	Elec-tricity	Time
	Backflush or prewash	Main wash	Intermediate rinse	Final rinse	Drying	litres	kWh	min.
	●	–	–	–	–	8	<0,1	8
	●	65°	●	65°	●	28	1.8	83
	●	55°	●	65°	●	28	1.7	77
	–	55°	●	65°	●	22	1.6	75

*) Figures vary according to water pressure crockery soiling, size of load, water inlet temperature, electricity fluctuations.

Programme Sequence Indicator

Fig. ① / 6

Programme sequence is shown by the programme selector knob.

During the main wash and hot rinse stages of a programme, the knob stays at one position until the appropriate temperature for that stage has been reached (heating up time).

The Prewash programme is at an end when the knob stops with the marker by the 2 on the knob almost against the marker on the control panel.

The other programmes end with the marker by the 1 on the knob almost against the marker on the control panel.

The programme sequence symbols mean:

Prewash

Main wash

Intermediate rinse, or wash on Rapid programme

Hot rinse

Drying

Drying

Crockery dries using residual heat. At the end of the programme the crockery should be left in the dishwasher with the door closed for 20 minutes. If the dishwasher is not emptied at the end of this time, it is desirable to open the door slightly.

Switching Off

Fig. ① / 2

The selected programme is completed automatically. The operating light remain on. By pressing the off button ① the appliance is switched off and both lights extinguished.

Unload the bottom basket first, to avoid water from the top basket dropping onto articles in the bottom one.

Recommendation

In order to avoid any inconvenience caused by possible water damage we recommend the stopcock/tap is turned off if the appliance is not to be used for any length of time (e.g. during holiday away from home).

Maintenance and Care

Cleaning the Sieves
Fig. ⑫

The sieve-filter combination is largely self-cleaning. However, it should be checked after every programme and cleaned if necessary. The complete filter can be removed by turning the coarse filter to the left and pulling out.

To remove the fine filter from the coarse filter place the complete filter on a firm surface eg worktop. Hold the fine filter firmly on the sides and push down.

The microfilter should be cleaned under a running tap with a brush, from the inside.

Re-assembly is the reverse of the removal procedure.

Ensure the complete filter is correctly located when replacing back in machine then turn the coarse filter to the right.

Care
Your dishwasher does not require special care – the interior is self-cleaning. Wipe the door seal regularly with a moist cloth, to remove food residues. The exterior of the cabinet can be cleaned with enamel polish (do not use abrasives).

Cleaning Spray Arms
Food can get into the jets on the spray arms and cause a reduction in efficiency. The arms can be removed for cleaning when the securing wing nuts have been screwed off (anti-clockwise). Remember to refit and tighten the wing nuts after the arms have been refitted.

Warning:

Do not interchange the upper and lower sprays arms. The spray jets must point upwards.

Note on testing:

Fig. ⑬⑭

Capacity 12 international place settings including serving dishes to DIN 44 990; IEC 436.

Test programme:
Normal programme 65 °C.

Use 7.5 g of reference detergent for the prewash and 17.5 g for the main wash.

Note for transportation

Observe the following if the dishwasher has to be moved:
- remove as much as possible out of the appliance. Soak up any moisture in the sump
- keep the appliance upright.

Hints for dealing with minor operating problems

(before you call in a serviceman)

Should a fault occur, read through these User Instructions to see if any of the advice given assists you to solve the problem, before you call Customer Service. If you call out a serviceman and the fault turns out not to be due to a defect in the appliance, you will be liable for the serviceman's charges.

The appliance does not operate:

1. Has the fuse blown or a circuit breaker tripped in the house wiring?
2. Is the appliance firmly plugged into the socket and is the latter switched on?
3. Is the water stopcock turned on?
4. Is the water inlet sieve at the stopcock clean?
5. Is the door properly closed?
6. Is the on/off button despressed properly? (Are the operating light on?)

The crockery is not cleaned properly:

1. Has the appropriate programme been selected?
2. Has enough dishwashing powder been put into the dispenser?
3. Is the sieve combination clean?
4. Is the crockery loaded correctly?
5. Is the drainage hose properly laid?
6. Are the jets in the spray arms partially blocked?
7. Is the jet in the ceiling blocked by food residue? (Remove by turning to the left, clean, then screw back in)
8. Is the cap properly fitted to the salt container?
9. Are the spray arms obstructed by crockery, cutlery etc?

The dishes are spotty:

1. Is there rinse aid in the dispenser?
2. Is the rinse aid dosage setting correct?
3. Does the salt container need replenishing? Has the correct type of salt been used? (ICI Granular Salt)
4. Has the salt solidified in the container during a long period when the dishwasher has been out of operation? (e. g. during a holiday). If so, stir the salt in the container before running a programme.

Electrical salt indicator is illuminated but salt container is full.

1. Was 1 litre of water added to the container when it was first filled?
2. Was it filled enough?
3. Was the salt stirred until the green float covered the window on the container.

If a fault cannot be dealt with by reference to this booklet, do not attempt to rectify it yourself – you are likely to increase the damage by so doing, and there is the danger of coming into contact with live electrical components.

Breakdown – what to do?

Good quality and modern construction techniques ensure an appliance that functions well. If, however, a fault should occur, please check first that all hints and advice given in these Operating Instructions have been followed. It may possibly be only a minor fault that has caused the breakdown.

If you cannot find the cause for the fault from these instructions our Service organization is at your disposal. Numbers to contact are given in your local yellow pages.

When calling Service please always give your full address, telephone number with area code, and the complete service number and model number of the appliance. The Service Number is located on the inner side of the door, at the right.

Fig. ② / 11 and ⑮

This number enables Service to try and carry the appropriate spare parts so the appliance can be repaired on the first visit. It may also save you extra costs for additional travelling time of the engineer.

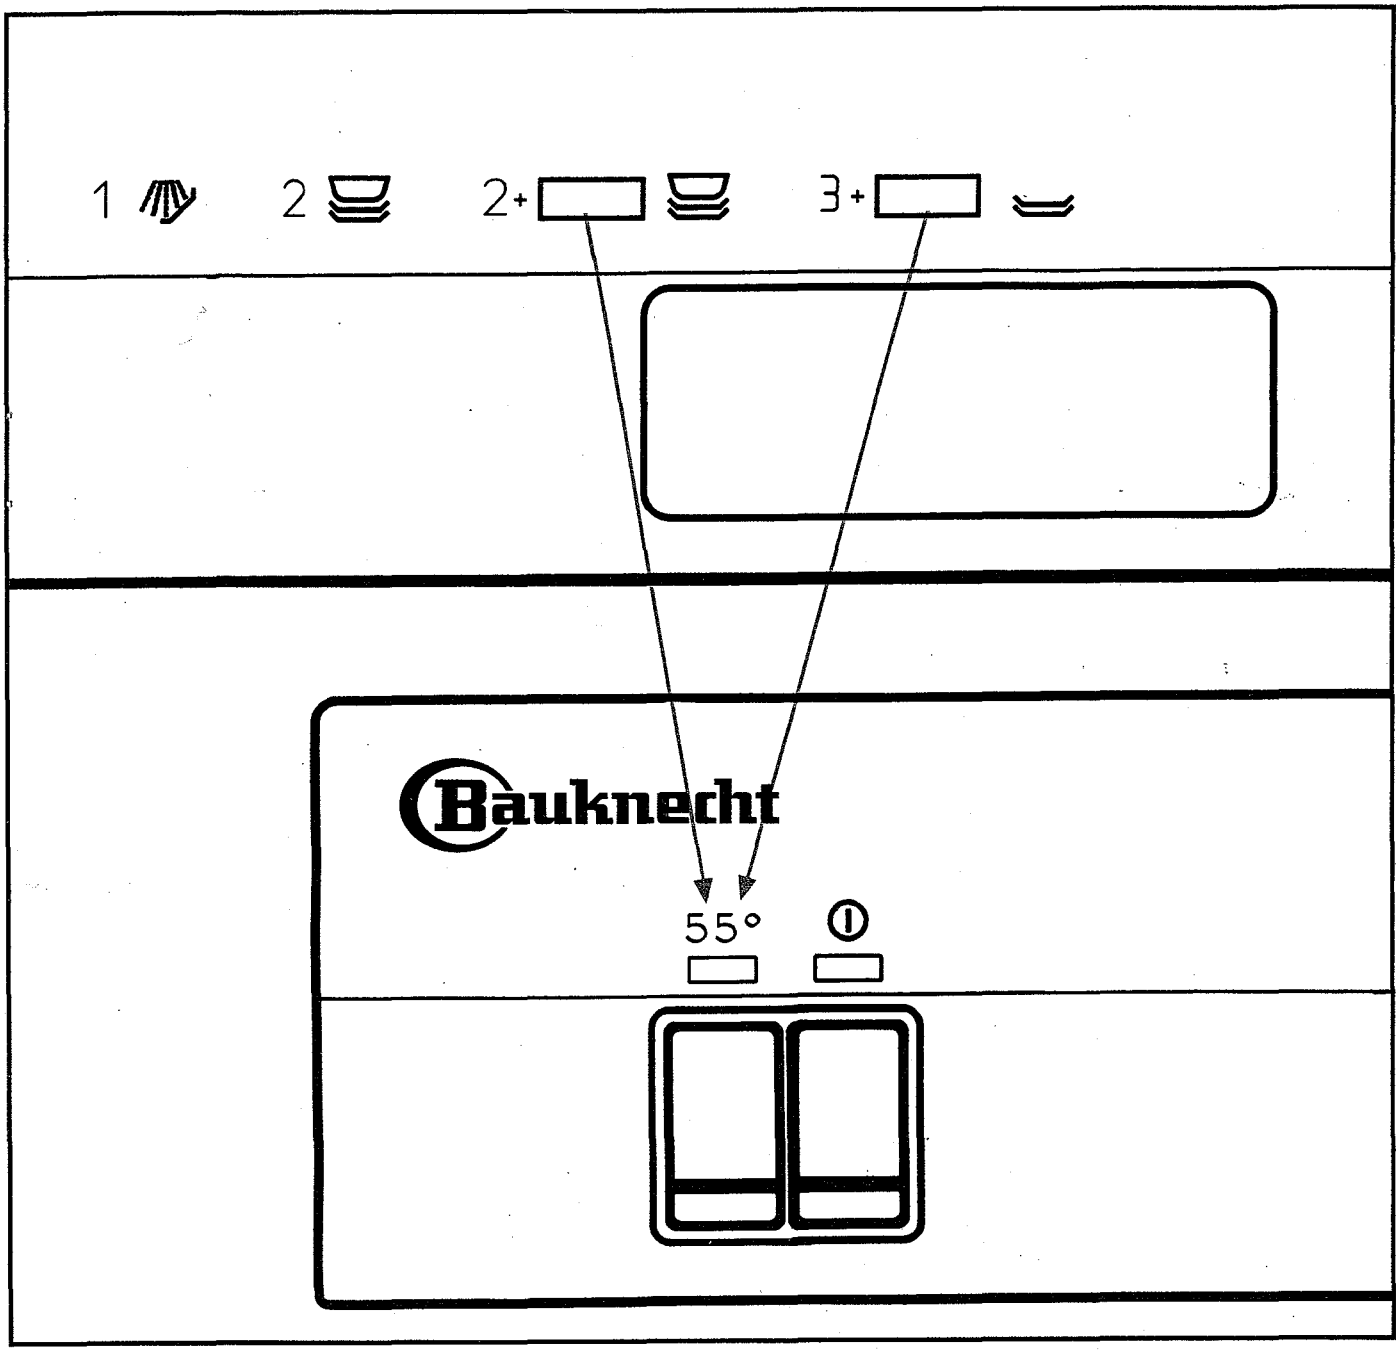

①A

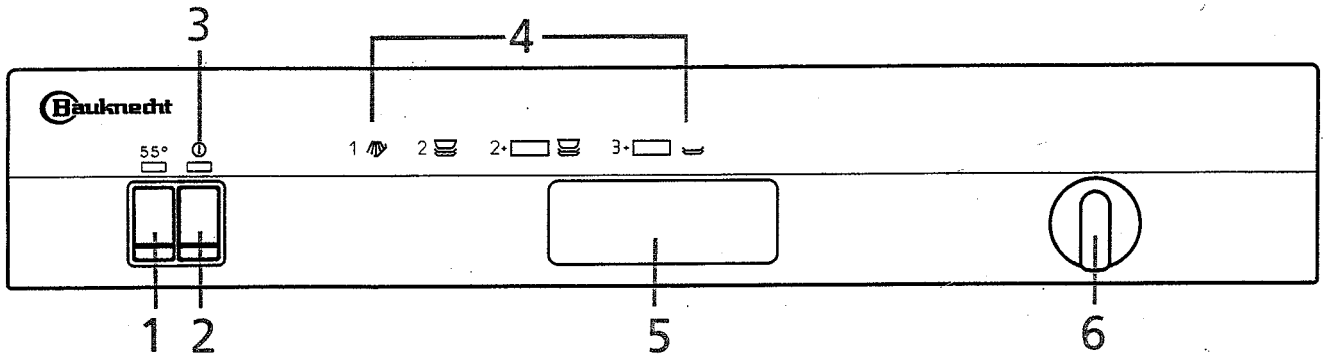

①

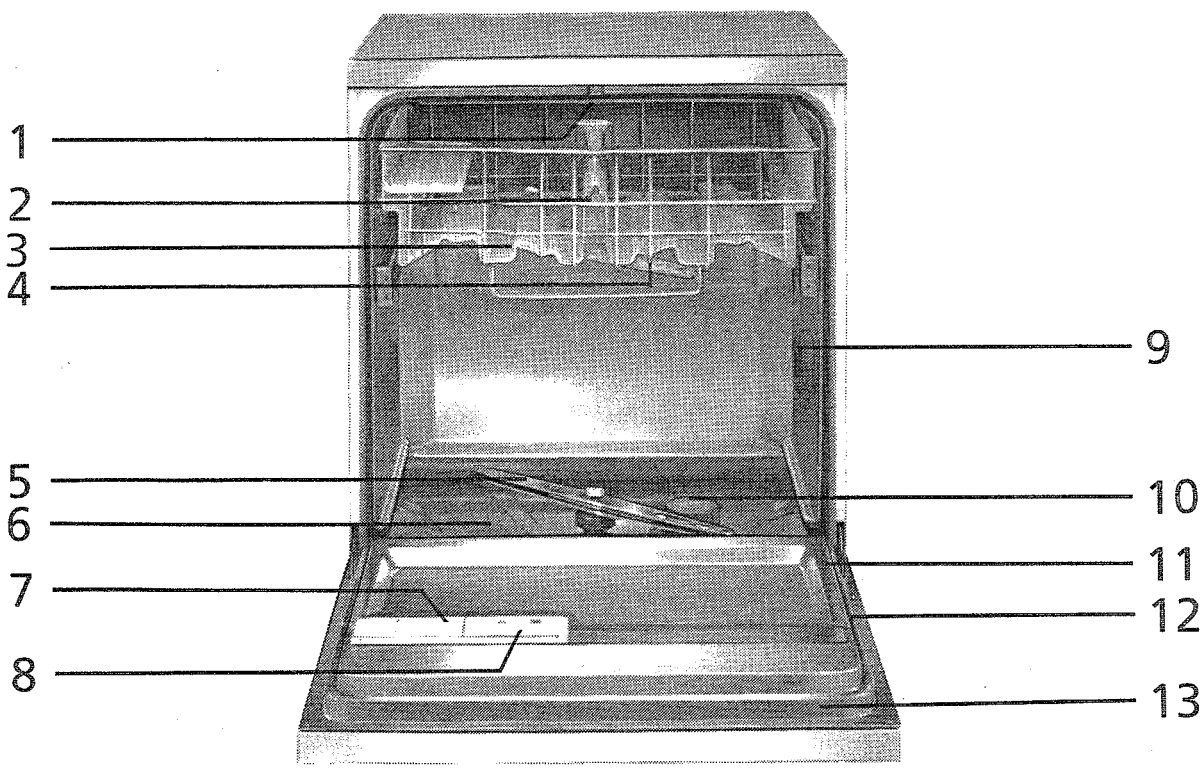

②

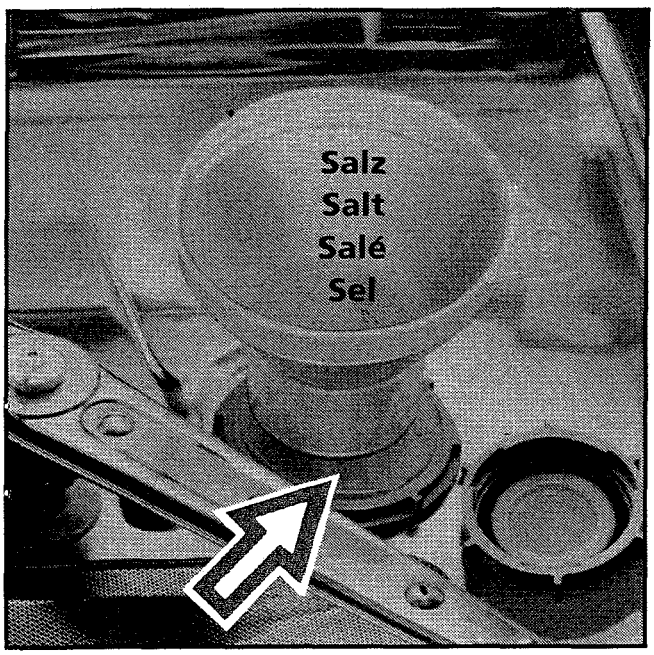

3

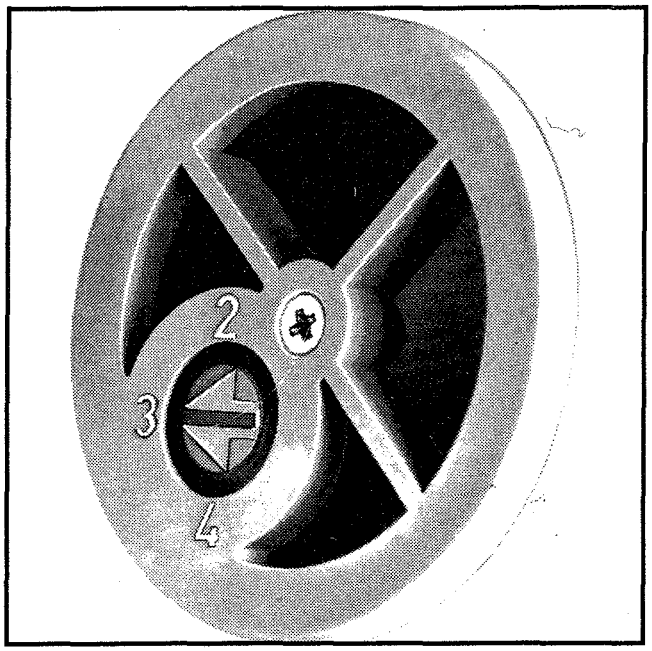

4

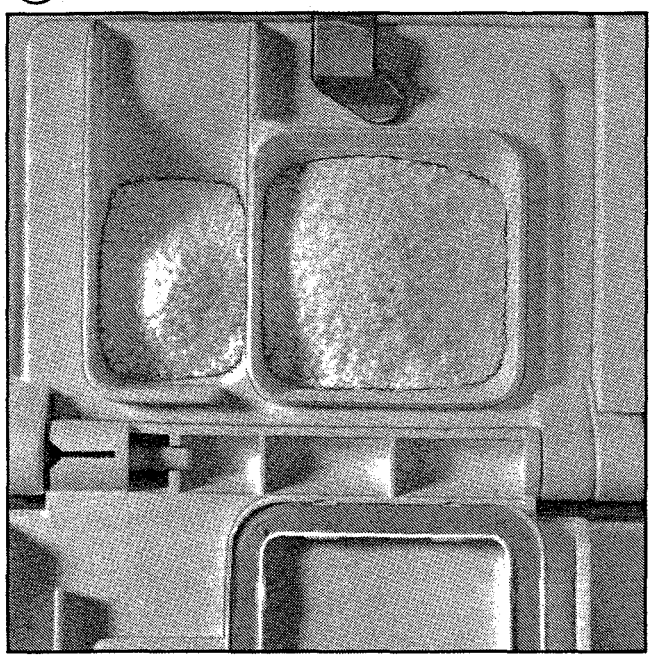

5

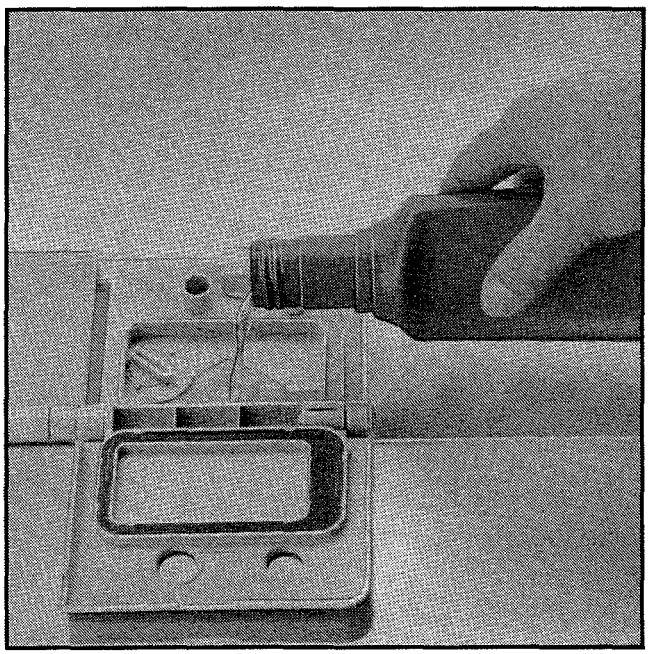

6

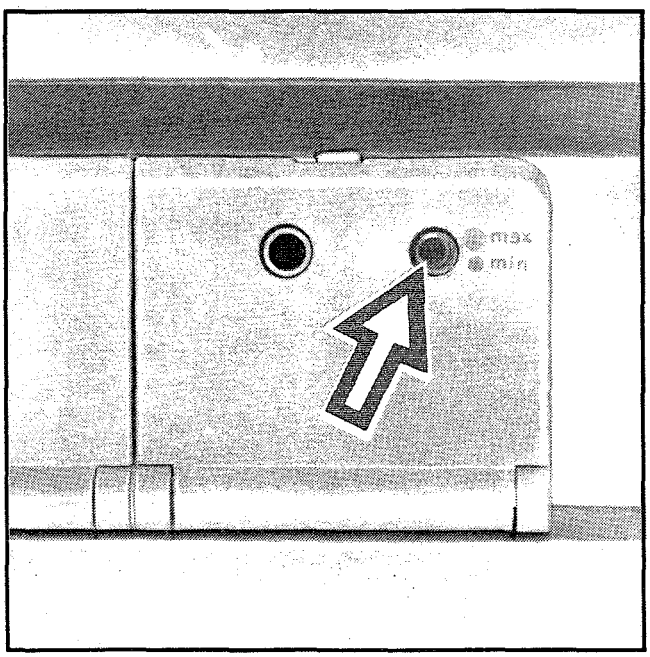

7

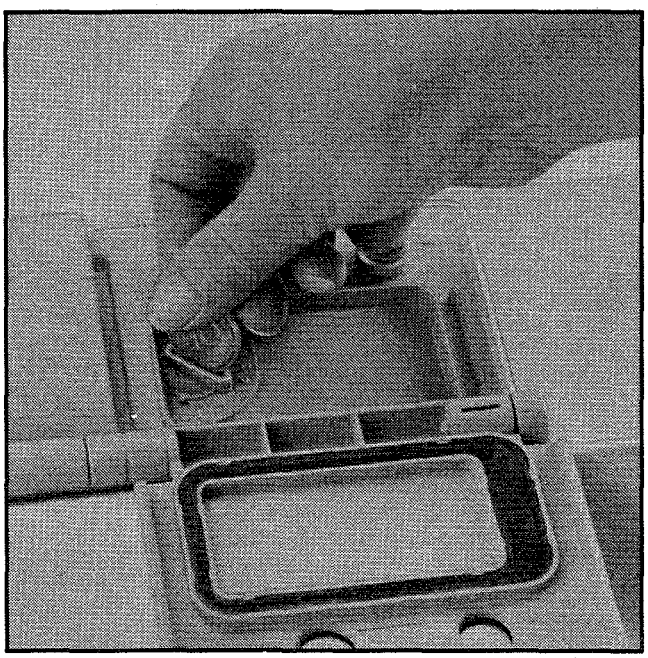

8

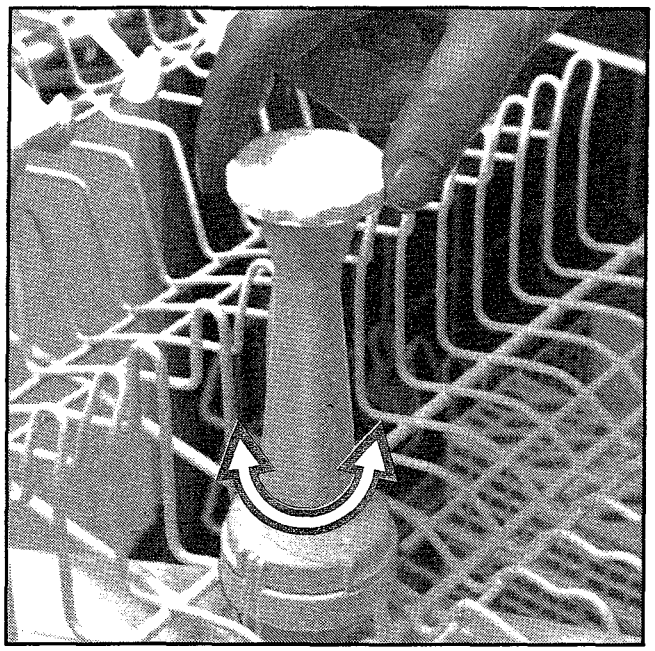

9

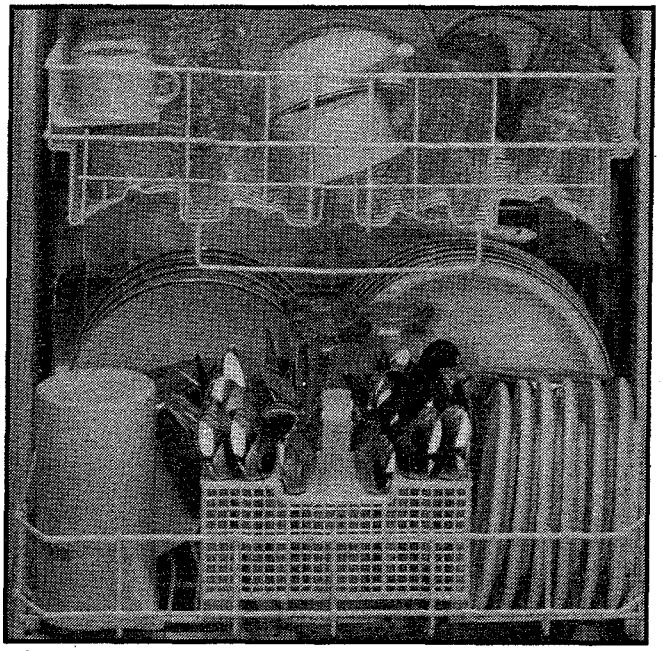

10

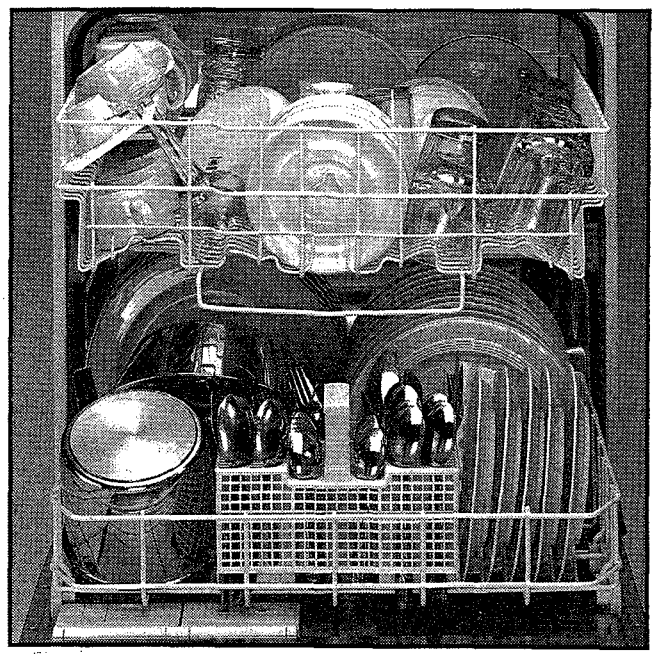

11

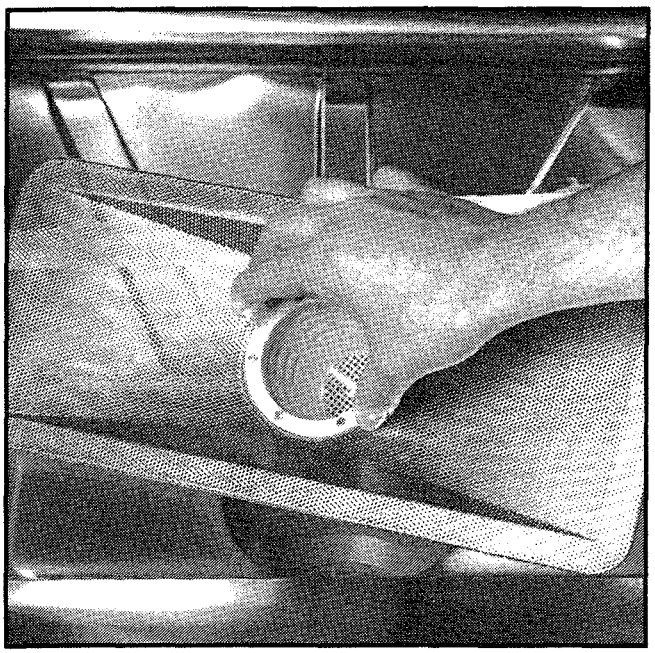

12

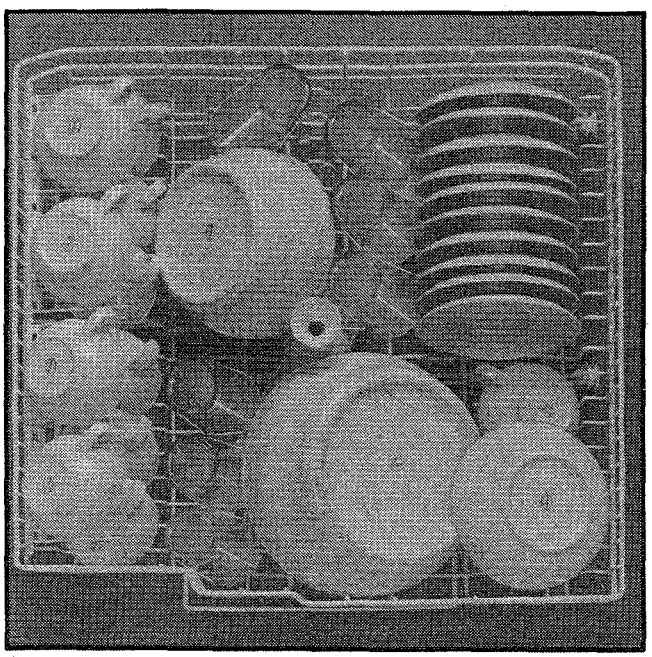

13

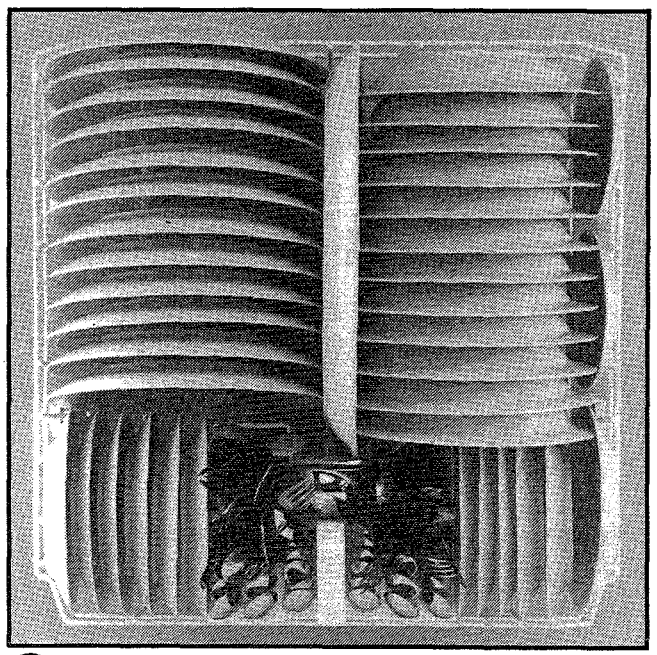

14

SERVICE-NUMMER

00/0000 00

⑮

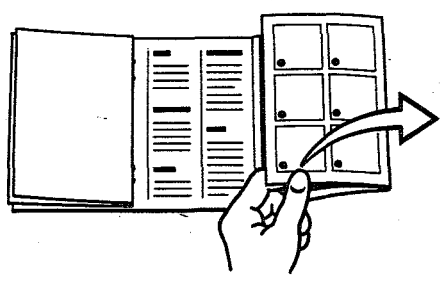

Änderungen vorbehalten
Subject to modification
Tous droits de modification réservés
Wijzigingen voorbehouden
Salvo variazioni
Reservado o direito de fazer alterações
Reservado el derecho de introducir modificaciones

Id.-Nr.23 084

GA **5329**/07.92

12 NC 4212 582 30840

Printed in Germany
Imprimé en Allemagne
Reichert GmbH, D-7014 Kornwestheim

D
GB
F
NL
I
P
E

Aufstellanweisung

Geschirrspüler

Installation Instructions

Automatic Dishwasher

Instructions de mise en place

Lave-vaisselle

Opstelaanwijzingen

Afwasautomaten

Istruzioni per la posa e l'installazione

Lavastoviglie

Instruções para Instalação

Máquinas de lavar loiça

Instrucciones para la instalación

Lavavajillas

D
GB
F
NL
I
P
E

(D) Seite 3–6

(GB) Page 7–10

(F) Page 11–14

(NL) Bladzijde 15–18

(I) Pagina 19–22

(P) Pagina 23–26

(E) Página 27–30

Contents

Installation Instructions	Page
Adjusting the height	8
Adjusting the worktop	8
Fitting a decor panel	8
Dimension Drawing	9
Electrical Connection	9
Water Inlet	9
Water Drainage	10

Adjusting the height

Freestanding Models

Unscrew all 4 feet about 5 mm, then adjust them individually to make allowance for unevenness in the floor. The appliance must stand horizontally.

Adjusting the worktop

Freestanding Models

The worktop normally fits flush with the front edge of the exterior cabinet of the appliance. This position can be changed so that the worktop projects 20 mm at the front, e. g. if the appliance is installed next to kitchen units with the work surface projecting.

Procedure:
Remove both fixing screws securing the brackets to the back of the appliance using a cross-headed screwdriver.

Loosen the fixing screws on the worktop, turn the brackets 180° and tighten the screws. The worktop can now be pushed forwards. Secure the brackets with the screws previously removed.

For installation under a worktop the appliance worktop, brackets and four screws should be removed. Slide the worktop forwards and remove.

Fitting a decor panel

Free Standing model

Some of these models have as standard decor frames which can be fitted with decor panels up to a maximum thickness of 4 mm.

Dimension of decor panel:
H x W: 602 x 590 (1 mm)

The decor panels should be cut in precise right angles. Any deviation should not exceed 0.2 mm per 100 mm. The Vario plinth can be adjusted to a height of 170 mm. Depending on this adjustment, the dimension of the decor panel for the plinth decreases.

On the GSU models, the set-back of the bottom part of the plinth can be adjusted up to 100 mm.

Decor panel weight: max. 1,8 kg

Separate Installation.

Instructions are supplied with the integratable models.
Warning: Before commencing any work remove the plug from the socket to disconnect the power supply.

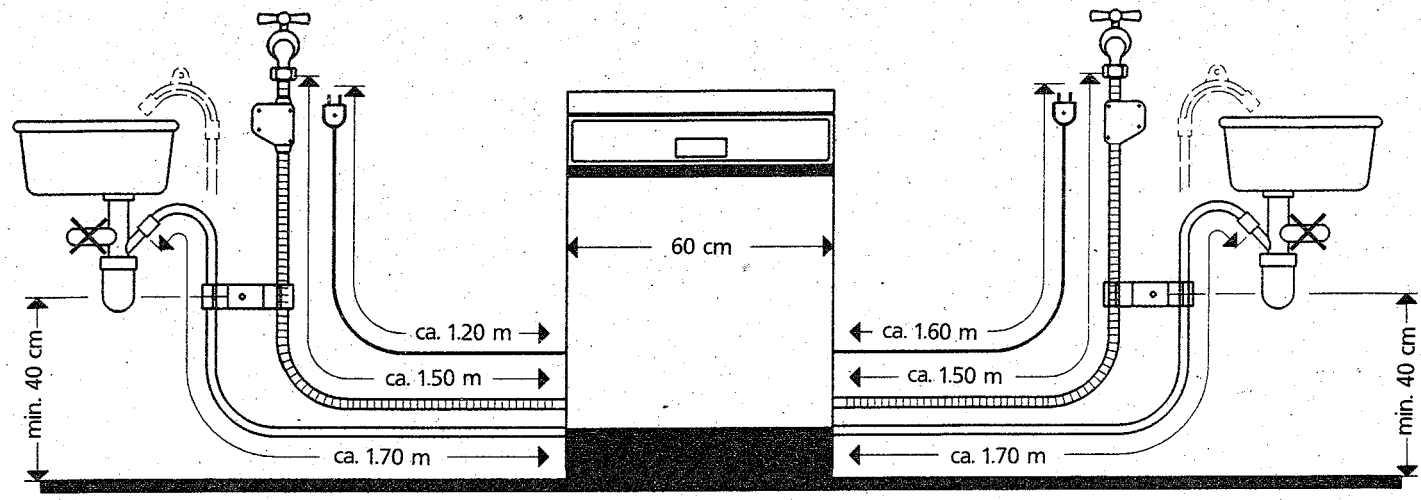

This dishwasher is delivered ready for installation; it has a power cable with plug, inlet water hose and drainage hose. It can be put into operation without special installation requirements if there is an earthed electricity point (installed by a qualified electrician), a water inlet and a drainage connection where the appliance is to be sited. (see figure ①)

Build under and integratable models are delivered without a worktop. Their height is, therefore, only 82 cm and they should be installed under a continuous work surface, which covers the appliance completely. All other dimensions are the same as on the Free Standing model.

Electrical Connection

Data regarding electrical connection and fuse requirements can be found on the rating label on the inner right hand side of the door.

Connection of the appliance should be made only to a proberly installed, earthed plug and/or socket. The relevant Regulations of the local electricity authority should be observed.

This appliance complies with European safety regulations.

This appliance conforms to EEC Directive No. 87/308 EEC on radio interference.

Water Inlet

Normal cold water, or warm water up to 60 °C.
Stopcock with G ¾" threaded connection.
Water pressure: 0.3–10 bar, 3–100 N/cm², 5–145 psi.
Pressure hose: ⅜"; 20 bar, 200 N/cm², 290 psi.

Operating pressure per DIN 44 995.
The valve casing on the water-stop hose contains electrically controlled components. It should not, therefore, be submersed in water. If the housing becomes damaged the plug must be removed from the socket.

Hose length
The hose set and the valve casing is an integral part of the appliance. As it contains electrical components and wiring it is prohibited to lengthen or to shorten the hose.

The supplied dirt filter must be fitted between stopcock and hose. The stopcock should be easily accessible, so that it can be turned off at the end of each programme. The dishwasher has reverse flow protection and no special reverse flow prevention device is needed.

Water drainage

The drainage hose should be suitably permanently installed. The outlet height **must be between 40 and 110 cm.** The waste outlet should be sufficiently large. A shaped rubber part with 2 diameters is provided for connection to a syphon by means of a hose clamp.

If a permanent drainage connection is not to be made, the hose can be hung over a sink, using the supplied hook. Secure the hose to stop it falling off the sink.

In addition, the drain hose is held to the inlet hose with a plastic clip. This prevents excess water damage should the hose fall out of the drain. The plastic clip can be located and fixed according to the location of the tap.

Water inlet and drain hoses should be laid free of kinks.

The Regulations of the local water authority should be observed.